




HY-TOWER™(SL)

OPERATING INSTRUCTIONS



2005

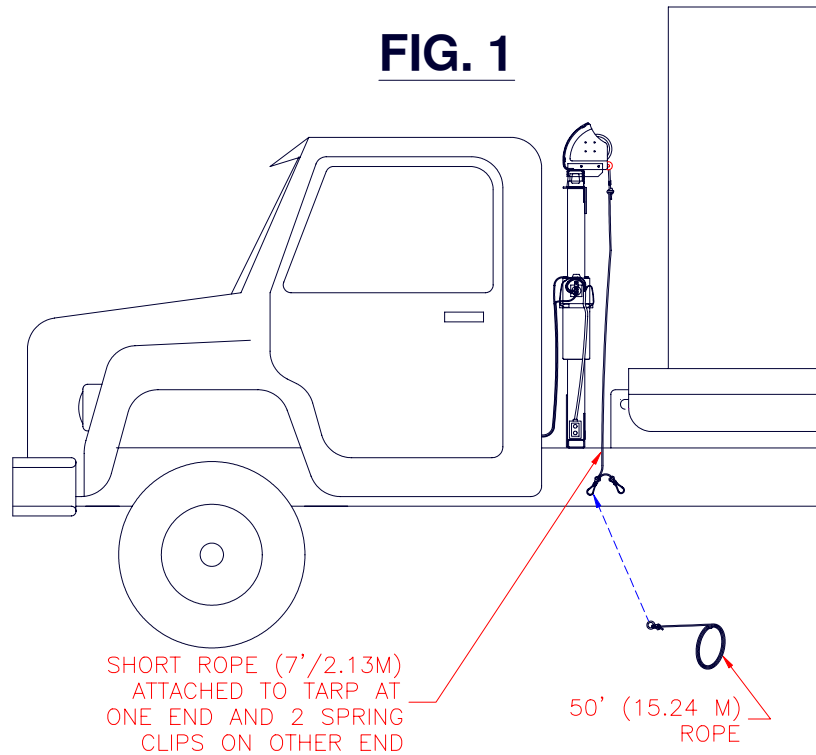

COVERING INSTRUCTIONS

NOTE: The operating instructions are the same for the original Hy-Tower system, the Mini Hy-Tower system, and the Skip Manual system. The operating instructions are also the same for a Cable roll off truck, Hook Lift style, or a Skip truck. The original Hy-Tower is shown in these instructions.

CAUTION: When activating the control lever make sure that moving parts are in view.

CAUTION: When operating system make sure that no one is present on the side that is not in your direct view.

CAUTION: Make sure the truck is not under power lines when raising Hy-Tower.


CAUTION: In an emergency stop the vehicles engine.

CAUTION: When servicing or repairing the Hy-Tower system, disconnect power to the components from the vehicles battery.

NOTE: The noise level is less than 72dB(A)


- Prior to raising tower, clip ring on 50' (15.24 M) pull rope to spring clip on short rope attached to

FIG. 2

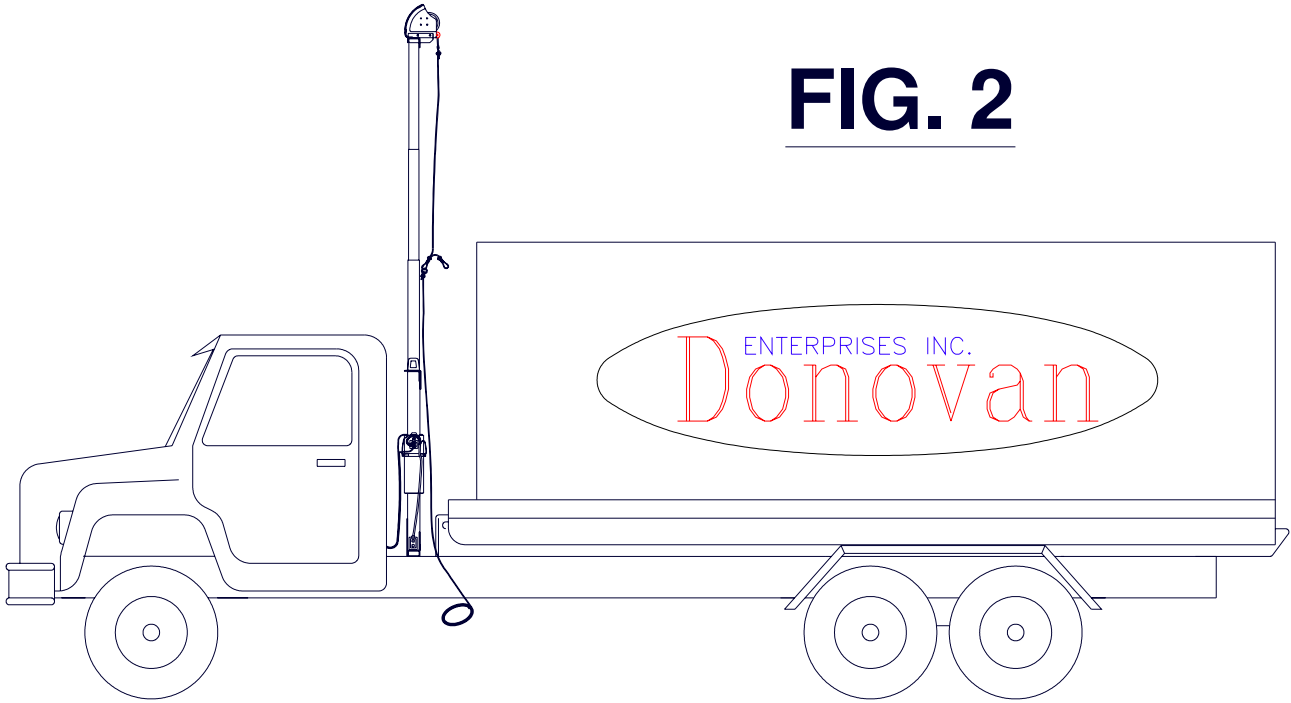


- Use remote operating switch to raise HY-TOWER™ (SL) to its maximum height, while allowing rope to extend with tower (fig. 2).

FIG. 3

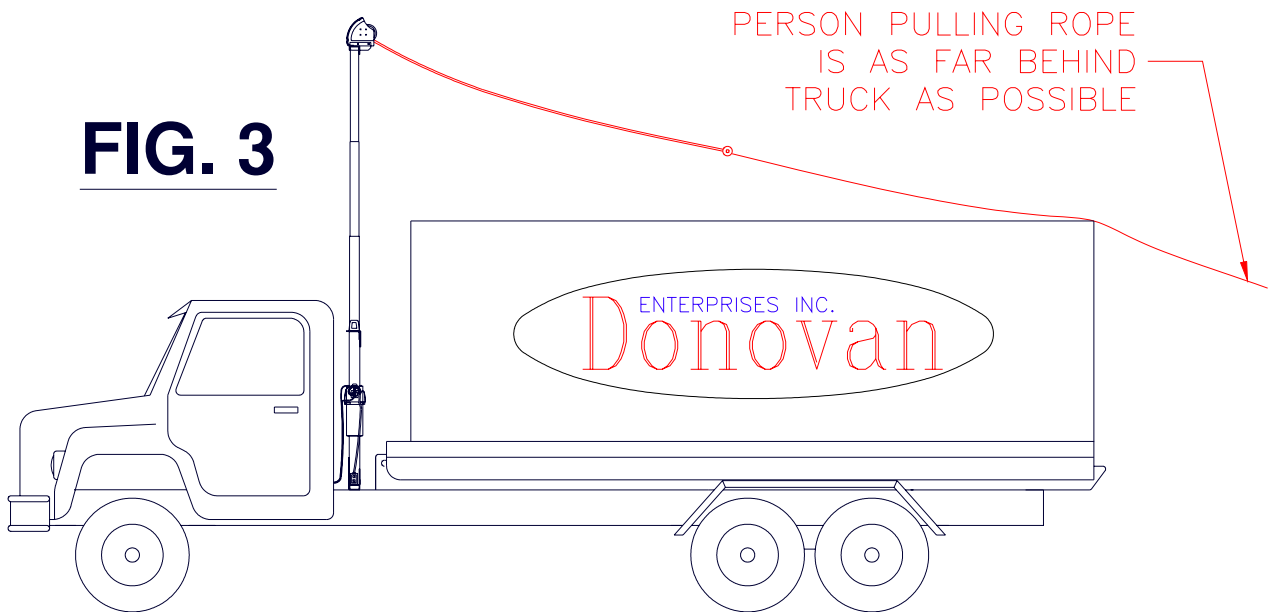


- With rope in hand, walk to rear of truck to a position directly behind container as far back as rope will allow (fig. 3).
- Pull tarp out so it completely covers container.

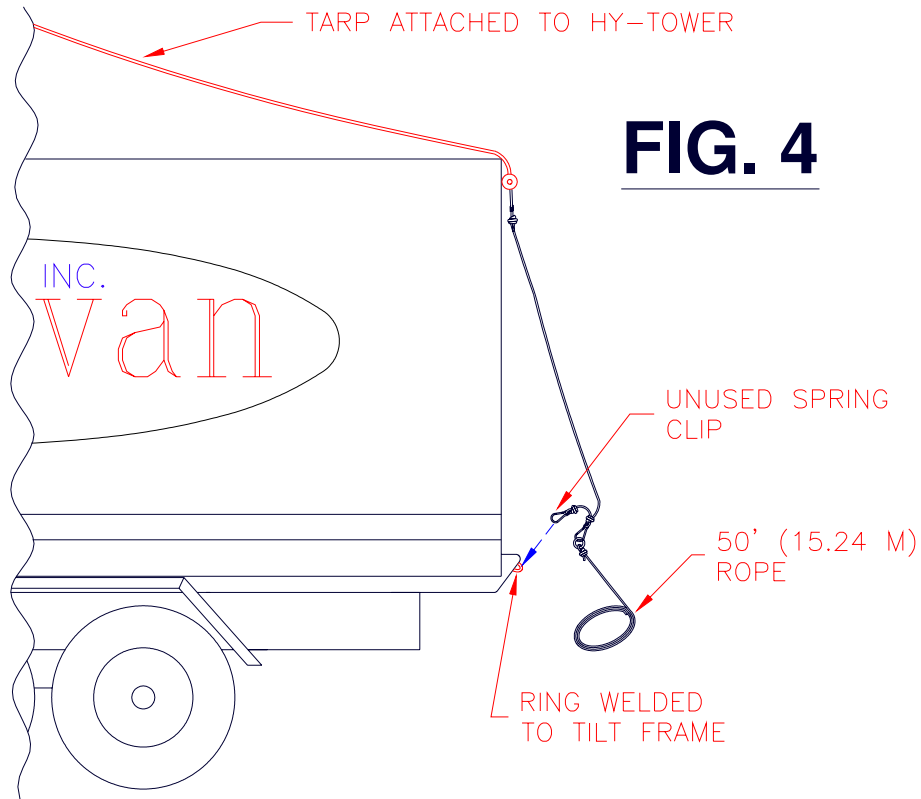

- While maintaining tarp position over container, walk toward container until you are at rear of truck.
- Clip the unused spring clip on short rope attached to tarp to the rear of the tilt-frame or container. Now the tarp is secured (fig. 4).
- Detach the long (50'/15.24 M) rope section and store it in cab of truck or in tarp box.


FIG. 5

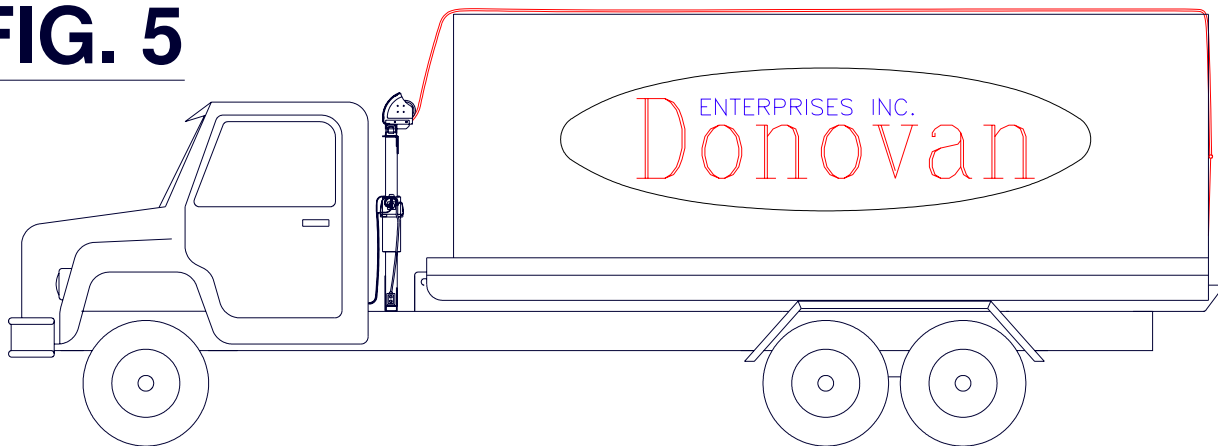

CAUTION: NEVER MOVE TRUCK UNLESS HY-TOWER™ (SL) IS IN THE FULLY RETRACTED POSITION.

- Use the remote operating switch to lower HY-TOWER™ (SL) to its fully retracted position (fig. 5).

FIG. 6

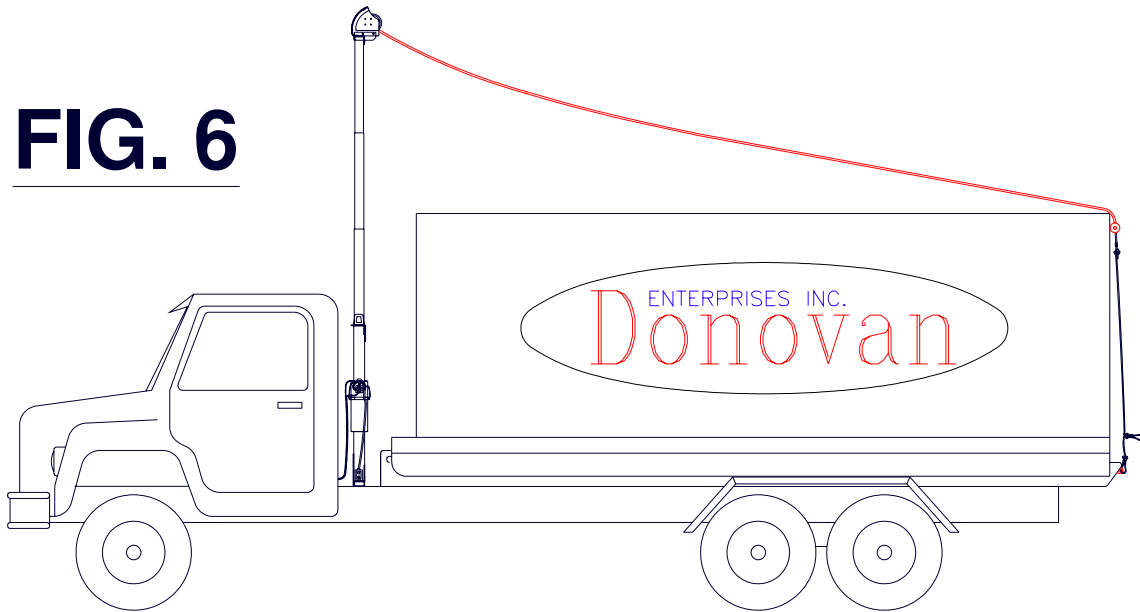

UNCOVERING INSTRUCTIONS

- Use remote operating switch to raise HY-TOWER™ (SL) to its maximum height (fig. 6).

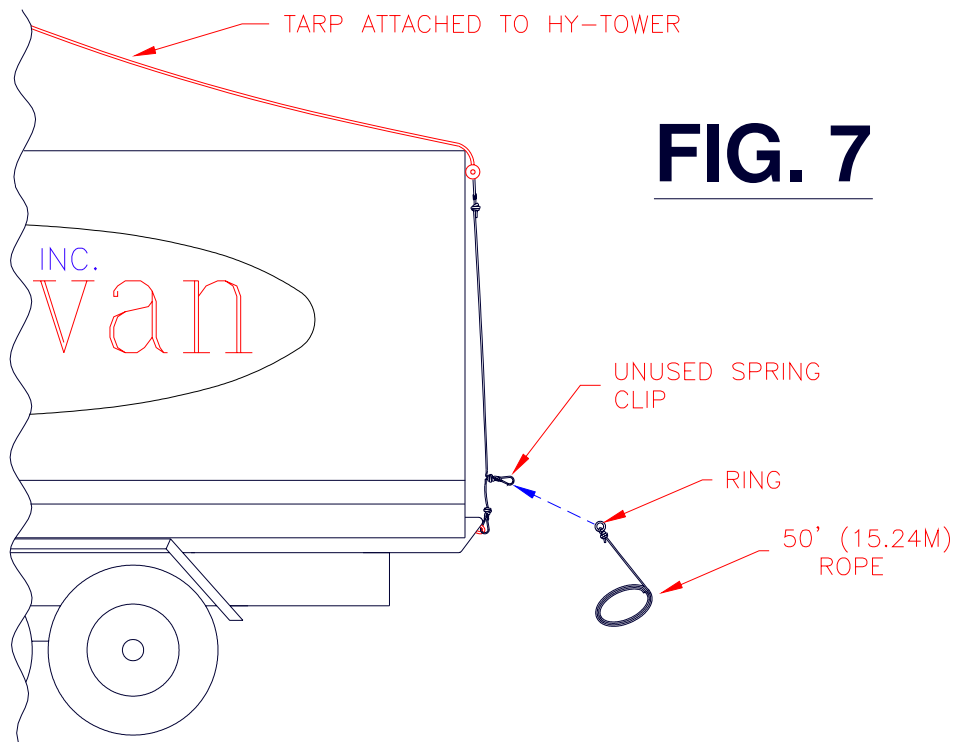



FIG. 7

- Clip ring on 50' (15.24 M) pull rope to unused spring clip on short rope at rear of trailer (fig. 7).

NOTE: Pulling down on 50' (15.24 M) rope will take tension off of spring clip attached to back of truck. This will make it easier to disconnect spring clip from rear of truck.


- While holding 50' (15.24 M) rope assembly securely, unclip spring clip from back of truck.

FIG. 8

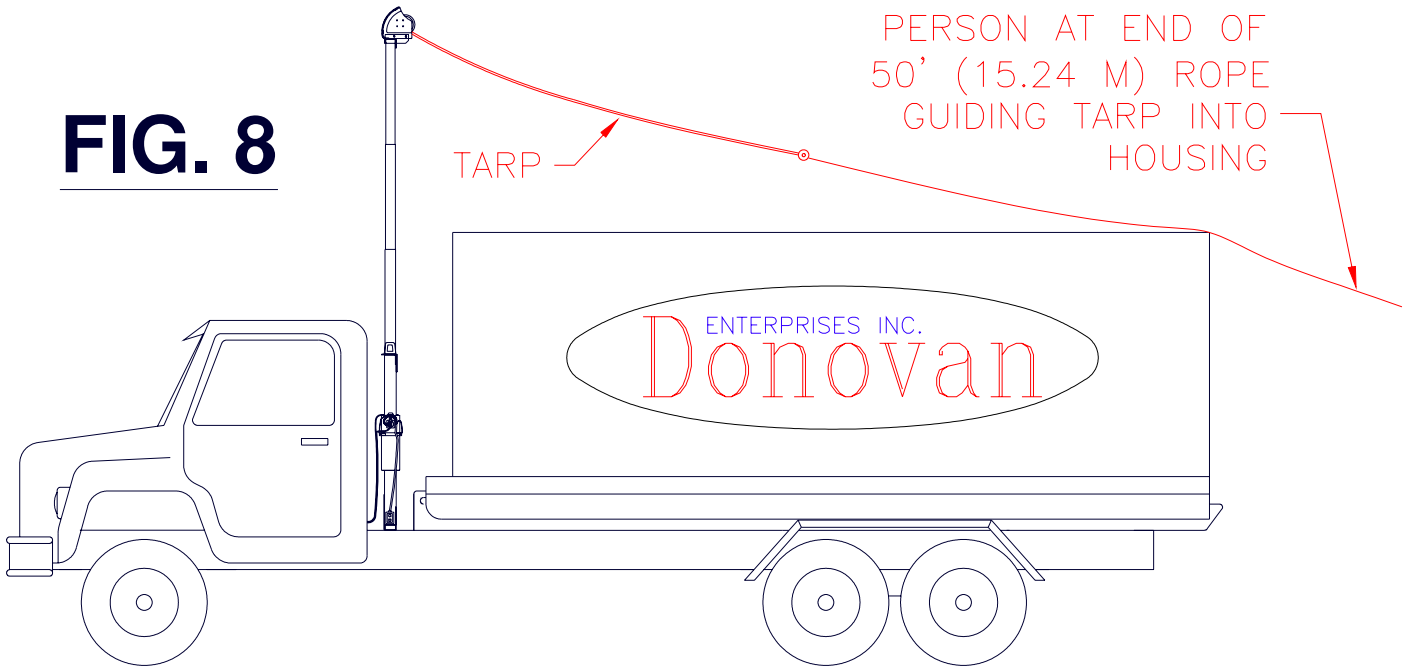

- Use 50' (15.24 M) rope to guide tarp as it rolls up into housing (fig. 8).

FIG. 9

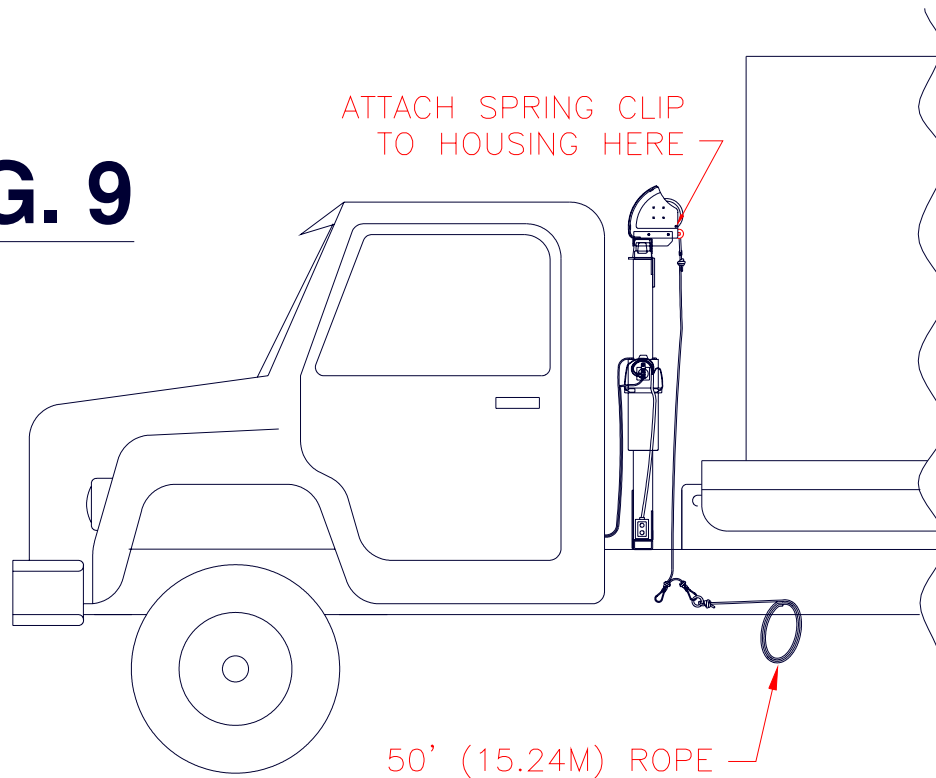

- Using remote operating switch, lower HY-TOWER™ (SL) to its fully retracted position.
- Disconnect 50' (15.24M) rope and store it in truck cab or tarp box.
- Attach spring clip to HY-TOWER™ (SL) housing to prevent short rope attached to tarp from swinging freely (fig. 9).

Periodic Inspection and Maintenance

Daily:

1. Check hydraulic hoses for wear tear and leak.
2. Check mechanism for any damage.
3. Check tarpaulin for tear.
4. Clean wheel tracks on the base.
5. Check if the system operates smoothly.

Weekly:

1. Check mechanism for any excessive wear and tear.
2. Check hydraulic hoses and components for leak and damage.
3. Check tarp tension.
4. Check hydraulic fluid in power unit.

Monthly:

1. Verify the tightness of hydraulic fittings.
2. Verify the tightness of the fasteners.
3. Check welds and other joins for cracks.
4. Apply grease to inner stages.